 
 
 


KCGT 6010/I

Instructions for use




FOR THE WAY IT'S MADE.®



Warnings	4
Safeguarding the environment	5
Instructions for installation and use	6
Extraction modes	6
Installation	7
Hood description	9
Functioning	9
Maintenance	10
After-Sales Service	11

Warnings

- **This appliance should not be used by children or people with limited physical or mental abilities and with no experience or knowledge of its use, unless they are supervised by someone in charge of their safety or who has taught them how to use the appliance.**
- **Children should not play with the appliance.**

1.  Do not connect the appliance to the mains supply until the installation is completely finished. Before carrying out any cleaning or maintenance work, always disconnect the hood from the mains supply by pulling out the plug or turning off the mains switch in the house.
2. Do not flambé food under the hood since the flames generated could cause a fire.
3. Do not leave a frying pan unattended when frying food as the cooking oil could catch fire.
4. Constant cleaning and maintenance of your hood will ensure it works properly. Regularly remove all the ingrained food from dirty surfaces. Regularly remove and clean or change the filter. Do not use inflammable material to convey exhaust air.
5. If the hood is used in conjunction with other appliances that run on gas or other fuels, the negative pressure of the room should be no greater than 4Pa (4 x 10⁻⁵ bar). This is why you should make sure the room is well aired.
6. Exhaust air from the hood should not be eliminated through the heating system chimney or appliances that run on gas or other fuels.
7. The room should be sufficiently ventilated when the hood is used together with other appliances that run on gas or other fuels.
8. Before touching the light bulbs, make sure they have cooled down.

Note: always use gloves when installing or carrying out maintenance work.



Electrical connection

The mains voltage should correspond with the voltage shown on the specifications label found inside the hood. If there is no plug, connect the hood to a socket that complies with current legislation and is in an easily accessible location. If there is no plug (direct connection to the mains supply) or the plug is not in an easily accessible location, fit a legally complying bi-polar switch that ensures the complete disconnection of the mains in the event of a category III line surge, in compliance with the installation regulations.

IMPORTANT: before reconnecting the hood circuit to the power supply, check that it is working properly, that the mains cable has been properly fitted and that it has NOT been crushed in its holder during installation.

Cleaning the hood

Warning! Failure to remove oil/grease (at least once a month) could lead to a fire breaking out. Use a soft cloth and mild cleaning product. Never use harsh substances or alcohol.

Before using the hood

To get best performance from the hood, please read these user instructions carefully and keep them for future reference.

Keep the packaging material (plastic bags, pieces of polystyrene, etc.) out of children's reach as they can be dangerous.

Make sure the hood has not been damaged during transportation.

The installation and the electrical connections, replacement of power cables with plug or flexible cable should be carried out by a qualified technician in compliance with current legislation in force.

This appliance was designed to be used by adults.

Warnings

Declaration of conformity

This product has been designed, manufactured and marketed according to the following:

- safety objectives of the "Low Voltage" Directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments).
- protection requirements of "EMC" Directive 89/336/EEC amended by Directive 93/68/EEC.

Troubleshooting guide

Hood does not work:

- Is the electrical power supply switched on?
- Is there a power failure?

Insufficient suction power:


- Did you set the right speed?
- Do the filters need to be cleaned or replaced?
- Are the air outlets blocked?

Light does not work:

- Does the bulb need to be replaced?
- Is the bulb correctly fitted?

Safeguarding the environment

1. Packing


The packaging material is entirely recyclable and marked with the recycling symbol . Follow local regulations for scrapping. Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

2. Product

This appliance is marked according to the European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).

By ensuring that this product is disposed of correctly, you will help prevent potentially negative consequences for the environment and human health.



The symbol  on the product or on the documents accompanying the product indicates that this appliance may not be treated as household waste. Instead, it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information on treatment, recovery and recycling of this product, contact your local authority, the household waste disposal service or the shop where you purchased the product.



Instructions for installation and use

Follow the instructions in this manual carefully. All responsibility is denied for problems, damage or fire to the appliance resulting in failure to comply with the instructions in this manual.

Extraction Modes

The hood is designed to be used in two modes: Venting exhaust fumes to the outside, or by passing the air through a charcoal filter before recirculating the air back into the kitchen.

Venting mode

 
 
The hood comes with an upper air outlet **B** for the discharge of fumes to the outside (venting pipe and fixing straps not supplied). **Fig. 1**

Recirculation Mode

This mode is to be used when it is not possible to vent the air to the outside. Air is purified by passing through activated charcoal filters (not provided) and recirculated back out into the kitchen. The air is sent back into the atmosphere via a pipe that passes through the cupboard cabinetry and is connected to the connector ring. **Fig. 2**

Installation

The minimum distance between the upper pan support surfaces on the cooking appliance and the lowest part of the cooker hood should be no less than 50 cm in the case of electrical cookers and 70 cm in the case of gas or mixed cookers. If the installation instructions for the gas cooking appliance specify a greater distance, then follow this instruction.

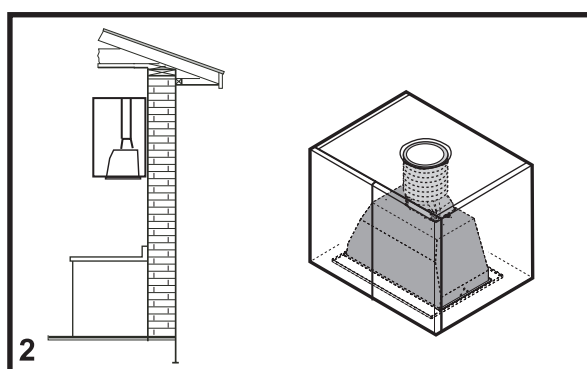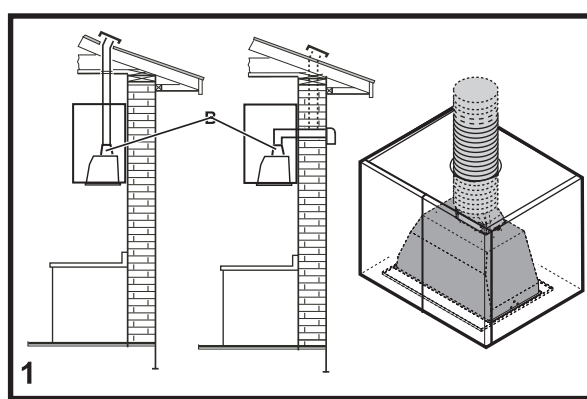

Installation

Fig.4

- Connect an extraction pipe to the connection ring on the hood and, whilst you inserting the hood into the cabinetry, check that the extraction pipe and the electrical wire come out of the hole made in the top of the cupboard.
- Attach the hood to the bottom of the cupboard with 8 screws. The frame on the box has more than 8 slots for passing the screws through, use the most suitable ones for your installation making them as equidistant as possible.


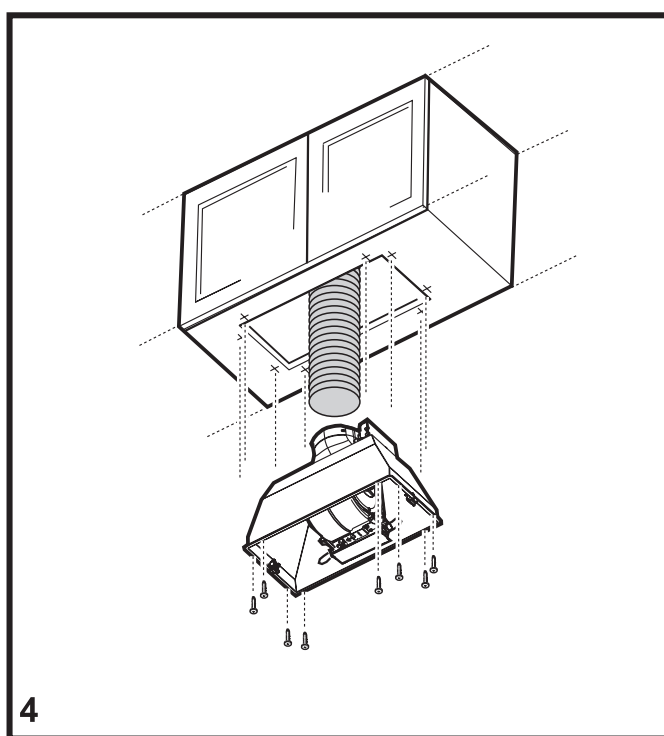 


Fig. 5

 
- Remove the grease filter and hook the filter support frame onto the hood. At this stage connect up the electrics on the control panel and the lights.
- Hook the filter support frame onto the hood (snap fitting onto the two side seals).
- Refit the grease filter.

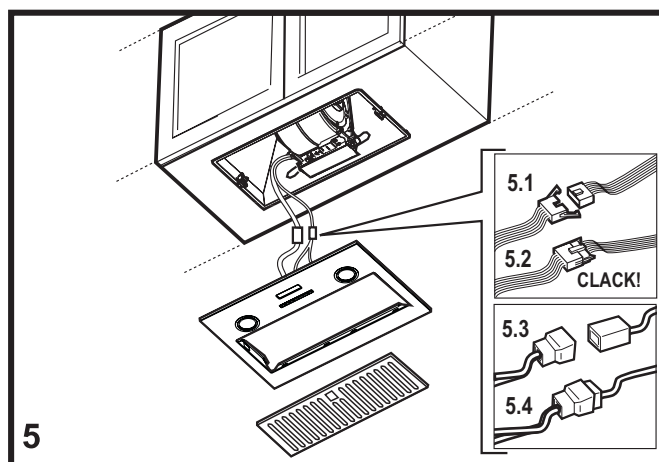

Hood description


Fig. 6

 1. Control panel
2. Grease filter
3. Handle for unhooking the grease filter
4. Halogen bulbs

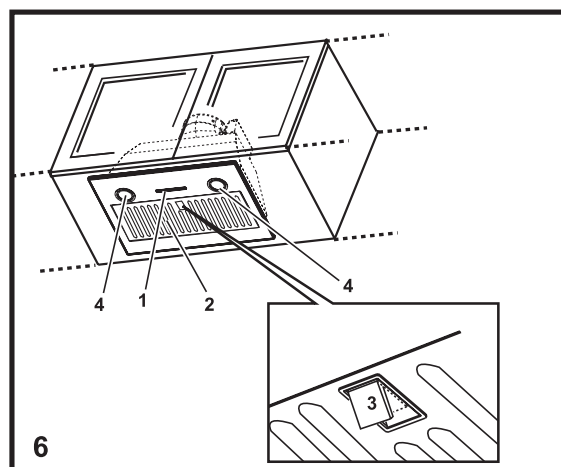

Functioning

 Turn to maximum speed when there is a lot of steam in the kitchen. We would advise you to turn the suction on 5 minutes before starting to cook and leave it running after you have finished cooking for about another 15 minutes.



1. **ON/OFF light button:** press to turn the light on or off.
2. **Motor ON/OFF button:** press to turn the hood on or off.
Once the hood is on, it sucks at the speed (power) of the previously selected suction.
3. **Extraction speed button 1**
4. **Extraction speed button 2**
5. **Extraction speed button 3**
6. **Intense extraction ON/OFF speed button:** lasts about 5 minutes, after which the hood returns to previously selected extraction speed .
7. **Timer ON/OFF button:** pressing this button can limit the running duration of the extraction selected, as follows:
Speed 1 for 20 minutes.
Speed 2 for 15 minutes.
Speed 3 for 10 minutes.
Intensive speed for 5 minutes.
After which the hood turns itself off.

If there are any running problems, before contacting the Customer Care Centre, disconnect the appliance from the mains for at least 5 seconds by removing the plug, then reconnect again.
If the problem persists, contact the Customer care Centre.

Maintenance

 Always disconnect the power supply before carrying out any kind of maintenance work.

Cleaning

The hood should be cleaned regularly both inside and out (at least as often as you carry out maintenance on the grease filters).

Use a damp cloth with mild cleaning products. Avoid using harsh products. **DO NOT USE ALCOHOL!**

 
Warning: Failure to follow the cleaning instructions on the hood and the replacement and cleaning of the filters, could lead to a fire starting. Please, therefore, follow the instructions given carefully.

Grease filter

It should be cleaned by hand once a month with mild cleaning products, or in the dishwasher at a low temperature and on the short cycle.

When washing in the dishwasher, the metallic grease filter might discolour but its filtering abilities remain unchanged.

In order to dismantle the grease filter, pull the spring handle to unhook it. **Fig. 7**

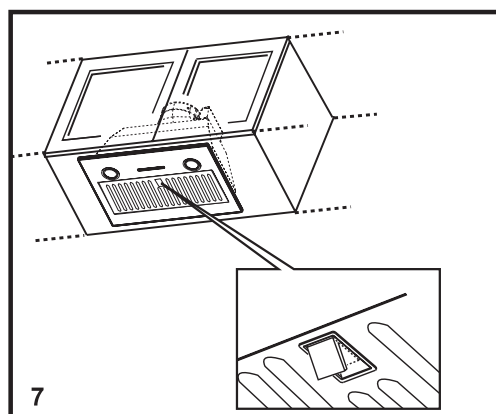

Carbon filter (only in recirculation mode) **Fig. 8**

 
The Activated Carbon Filter absorbs the unpleasant smells produced when cooking.

The saturation of the carbon filter varies depending on the installation, usage and how often the grease filters are cleaned.

In any case, the cartridge must be replaced at least once every four months.

Fitting/dismantling the carbon filter:

- Remove the grease filter, unhook the filter support frame taking care to disconnect the control panel and lights (see Fig. 5).
- Attach a carbon filter on each side to cover both the protection grills on the motor impeller, then turn the central handle **C** on the filters clockwise. Turn the central handle **C** on each filter anticlockwise to dismantle.
- Refit the filter support frame, re-connecting the control panel and lights and refitting the grease filter.

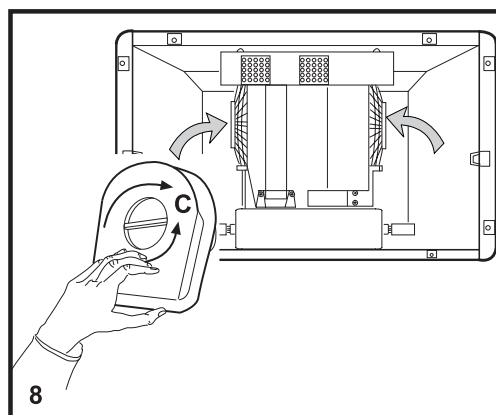


Replacing the bulbs **Fig. 9**

Disconnect the appliance from the mains supply.

Warning! Before touching the light bulbs make sure they have cooled down.

1. Remove the protective cover using a small flat screwdriver or a similar tool.
2. Replace the blown bulb.
Only use 20W max (G4) halogen bulbs, and do not touch them with your bare hands.
3. Fit the light cover on again (clicks into place).

 If the light does not work, check that the bulb has been inserted properly before calling the Customer Care Centre.

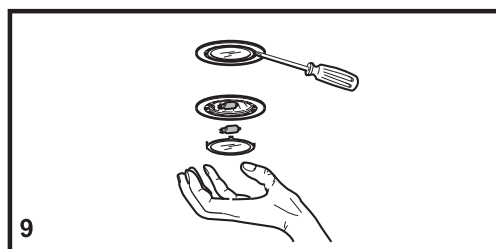

After-Sales Service

Before calling Customer Care Centre:

1. See if you can solve the problem yourself with the help of the "Troubleshooting guide".
2. Switch off the hood for a few minutes and re-start it to see if the problem has cleared itself.
3. If the malfunction persists, call the Customer Care Centre Service.

Specify:

- the nature of the problem,
- the product model on the rating plate inside the hood and visible when you remove the grease filters,
- your full address,
- your telephone number and area code,
- the service code (number below the word SERVICE on the rating plate inside the hood behind the grease filter).

If repair work has to be carried out, contact the Customer Care Centre (this is a guarantee that original spare parts will be used and a proper repair job done).

Failure to comply with these instructions could compromise the safety and quality of your appliance.

SERVICE 0000 000 00000



 
Electrical connection for Great Britain and Ireland only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

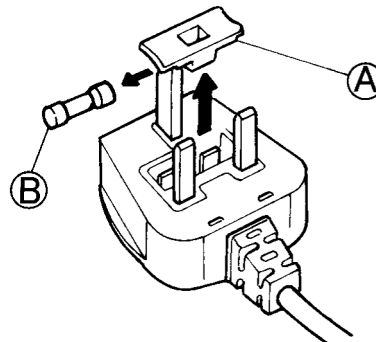

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

 
 
Replacement fuse covers are available from your local electrical store.

 
 
 
For the Republic of Ireland only

 
 
 
The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact KitchenAid Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations.







Printed in Italy
05/07

5019 718 02011

GB